



Installation Guide

Heat exchanger adapters

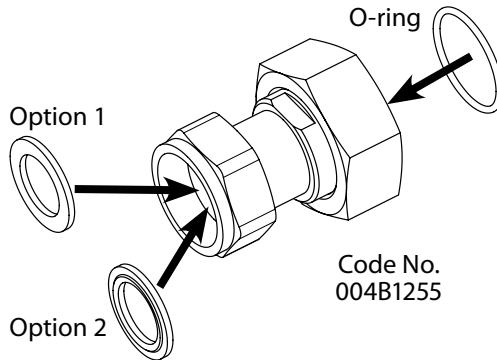

Flat gasket heat exchanger G1A - station with o-ring connection

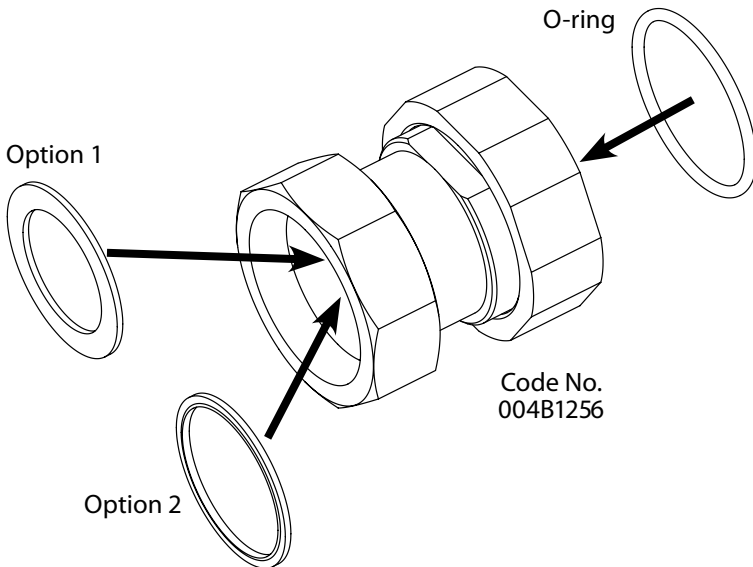

Flat gasket heat exchanger G2A - station with o-ring connection