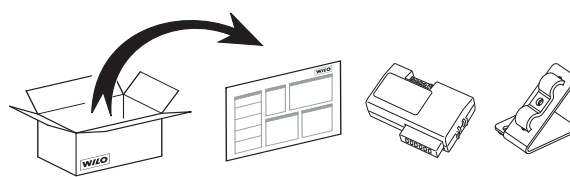
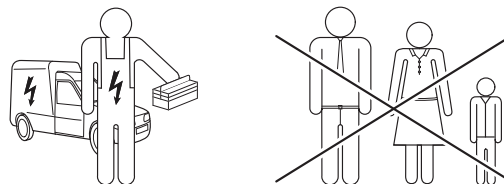


Wilо-IF-Modul CAN

Fig. 1

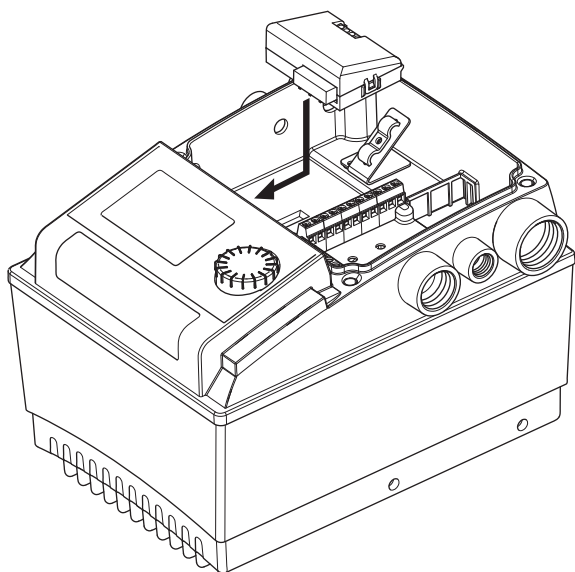
- Ⓧ Einbau- und Betriebsanleitung
- Ⓧ Installation and operating instructions
- Ⓧ Notice de montage et de mise en service
- Ⓧ Inbouw- en bedieningsvoorschriften
- Ⓧ Instrucciones de instalación y funcionamiento
- Ⓧ Istruzioni di montaggio, uso e manutenzione
- Ⓧ Asennus- ja käyttöohje
- Ⓧ Monterings- och skötselanvisning
- Ⓧ Beépítési és üzemeltetési utasítás
- Ⓧ Οδηγίες εγκατάστασης και λειτουργίας
- Ⓧ Návod k montáži a obsluze
- Ⓧ Instrukcja montażu i obsługi
- Ⓧ Инструкция по монтажу и эксплуатации
- Ⓧ Monterings- og driftsvejledning
- Ⓧ Montasje- og bruksanvisning

Fig. 2


2 085 044

Fig. 3

Wilо-VeroLine-IP-E
 Wilо-VeroTwin-DP-E
 Wilо-Economy MHIE
 Wilо-Multivert MVIE (1,1 - 4 kW)
 Wilо-Helix VE (1,1 - 4 kW)
 ...

**Fig. 4**

Wilо-CronoLine-IL-E
 Wilо-CronoTwin-DL-E
 Wilо-Multivert MVIE (5,5 - 7,5 kW)
 Wilо-Helix VE (5,5 - 7,5 kW)
 ...

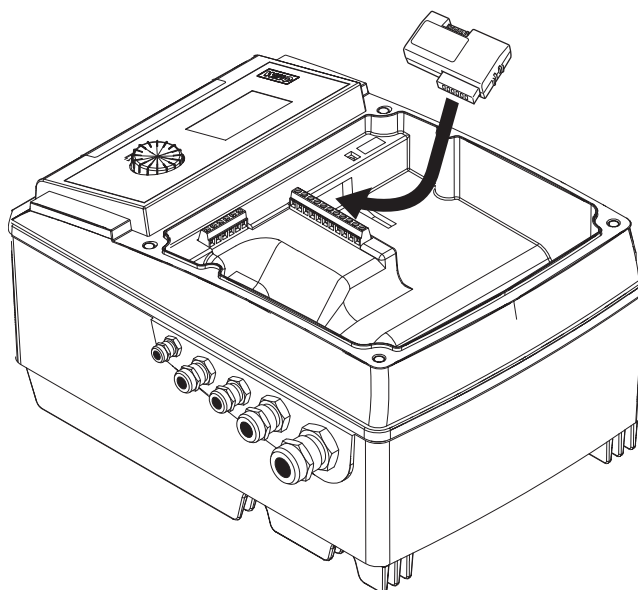

Wilo-IF-Modul CAN

Fig. 5

Wilo-VeroLine-IP-E
 Wilo-VeroTwin-DP-E
 Wilo-Economy MHIE
 Wilo-Multivert MVIE (1,1 - 4 kW)
 Wilo-Helix VE (1,1 - 4 kW)
 ...

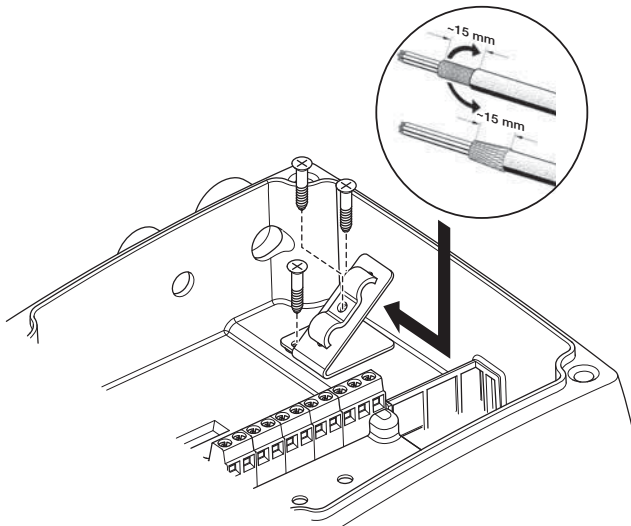


Fig. 6

Wilo-CronoLine-IL-E
 Wilo-CronoTwin-DL-E
 Wilo-Multivert MVIE (5,5 - 7,5 kW)
 Wilo-Helix VE (5,5 - 7,5 kW)
 ...

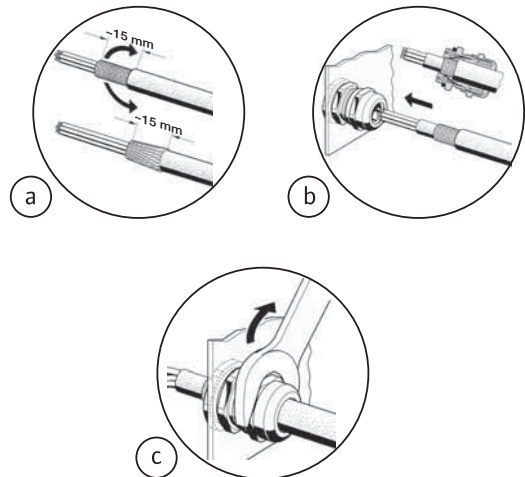


Fig. 7

