



avrorarm.ru  
+7 (495) 956-62-18

DT-3360/61/66/63/ 67/68





1.3

1.3.1

2

2.1

	DT-61	DT-63	DT-60	DT-67	DT-68	DT-66
	•	•	•	•	•	•
		•		•	•	
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•		•	•	•
					•	•
	•	•	•	•	•	•
p-n	•	•	•	•	•	•
	•	•	•	•		•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
				•	•	•
(True RMS)				•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
	30					
	•	•	•	•	•	•
0		•		•		

3.  
3.1.

3.1.1

	3360	3361	3363	3366	3367	3368
	6000					
	2					
			.			
	«OL»					
	BAT					
	9 ( )					
	25					
	30					
	229 80 49					
	303					
	-10 .50° / 90%	-10 .50° / 90%	-10 .50° / 90%	5°40° / 80%	-10 .50° / 90%	5°40° / 80%
	-30 .. 60° / 90%	-30 .. 60° / 90%	-30 .. 60° / 90%	-20 ....60° / 80%	-30 .. 60° / 90%	-20 ....60° / 80%

3.2

3.2.1

(23±5)° , .	: ≤75%	DT-3360	DT-3361	DT-3363	DT-66	DT-3367	DT-3368
		60 , 600 , 1000			660/1000	60/600/1000	660/1000
		±(2,0%+5 . . . )		±(3,0%+5 . . . )	±(2,8%+10 . . . )	±(3,0%+5 . . . )	±(2,5%+10 . . . )
		0,01			0,1	0,01	0,1
		50-400					
				60/600/1000		60/600/1000	660/1000
				±(2,8%+8 . . . )		±(2,8%+8 . . . )	±(2,5%+10 . . . )
				0,01		0,01	0,1
		6/60/600/750		0,6/6/60/600/750	0,66/6,6/66/600	0,6/6/60/600/750	0,66/6,6/66/600

		$\pm(1,5\%+5 \dots)$	$\pm(0,8\%+20 \dots)$	$\pm(1,0\%+10 \dots)$	$\pm(0,8\%+20 \dots)$	$\pm(1,8\%+10 \dots)$
		1	100	1	100	1
		0,6/6/60/600/1000	0,6/6/60/600/800	0,66/6,6/66/600	0,6/6/60/600/800	6,6/66/600
		$\pm(0,8\%+3 \dots)$				$\pm(1,5\%+3 \dots)$
		100		1	100	1
		600 , 6/60/600 , 6/60	0,66/6,6/66/600 6	600 , 6/60/600 6/60	0,66/6,6/66/660 , 6,6/66	
		$\pm(1,0\%+4 \dots)$				
		0,1				
		40/400 , 4/40/400/4000	40/400 , 4/40/100	6,6/66/660 , 6,6/40	40/400 , 4/40/100	
		$\pm(3,5\%+10 \dots)$	$\pm(3,0\%+5 \dots)$	$\pm(3,0\%+5 \dots)$	$\pm(3,0\%+5 \dots)$	
		0,01		1	0,01	
		10/100/1000 , 10/100/1000 , 10		30 15	10/100/1000 , 10/100/1000 10	30 15
		$\pm(1,2\%+2 \dots)$				
		0,001		1	0,001	1
			0,5~99,0%	10~94,9%	0,5~99,0%	10~94,9%
		$\pm(1,2\%+2 \dots)$				
			-20° ~760°			
			$\pm(3,0\%+5^\circ)$			
		< 100		<40	< 100	< 40
		0,3		0,5	0,3	0,5

4.

4.1

		1	
		2	
		1	
		1	9 « »
		1	
		1	
( - )		1	: 3363/61/67/68/66
		1	: 3363/61/67/68/66

5.

5.1.

5.1.1

	DT-3360/63	
MODE		
RANGE		
MAX/MIN		/
Hz%		%

AUTO POWER OFF	
OFF	
COM	
HOLD	
1000A	1000A
AC	/
600A	600A
60A	60A
•))) →	p-n , ,
V dc	
DC Zero	( 3363)
V ac	
DT-3360/61	
AC	/
DC	/
AUTO	
MAX	
MIN	
HOLD	
REL	
→	p-n
•)))	
DC ZERO	0
°C	
°F	
RPM	
Hz	
%	%
Mk	
µnF	
mVa	
A	
DT-3361/67	
MODE	
RANGE	
MAX/MIN	/
Hz%	%
AUTO POWER OFF	
OFF	
COM	
HOLD	
1000A	1000A
AC	/
600A	600A
60A	60A
•))) →	p-n , ,
V dc	
V ac	
Temp	
CAP	
DC ZERO	( 3367)
DT-3366	
1000A	1000A
660A	660A
A	A
AC	/
DC	/
TEMP	
CAP	
•))) →	, p-n
Hz%	%
OFF	
MODE	
MAX/MIN	/
HOLD	
HZ	
INRUSH	
DC ZERO	( 3368)
AUTO POWER OFF	
DT-3366/68	
AC	
DC	
ZERO	
INRUSH	
MANU	
AUTO	
HOLD	
MAX	
MIN	
REL	

	p-n
•)))	
DC ZERO	0
°C	
°F	
RPM	
Hz	
%	%
Mk	
µnF	
mVa	
A	

5.2.


DT-3360 /61

5.2.1 ( . 5.2.1)

5.2.1

1		
2		/
3	/	<p>•</p> <p>•</p> <p>HOLD</p> <p>HOLD.</p> <p>HOLD.</p> <p>HOLD 2</p> <p>HOLD</p>
4		
5		<p>1. RANGE. «AUTO»</p> <p>2. RANGE,</p> <p>3. RANGE 2</p>
6		:
7	COM	
8		•
9		•
10	/	<p>•</p> <p>MAX</p> <p>•</p> <p>MIN</p> <p>•</p>

		2	MAX/MIN.
11	V Hz (3360) V Hz CAP TEMP(3361)		
12		/	

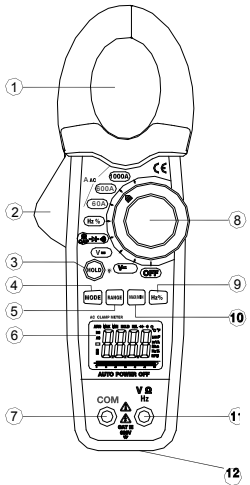

5.2.1  
3360

DT-3363/67

5.2.2 ( . 5.2.2)

5.2.2

1		
2		/
3	/	<ul style="list-style-type: none"> <li>•</li> <li>•</li> </ul> <p>HOLD</p> <p>HOLD.</p> <p>HOLD.</p> <p>HOLD</p> <p>2 .</p> <p>HOLD 2 .</p>
4		
5		<p>1. RANGE. «AUTO»</p> <p>2. RANGE,</p> <p>3. RANGE 2</p>



6		:
7	COM	
8		• / •
9		• DC ZERO • DC ZERO
10	/	• MAX • MIN • 2 MAX/MIN.
11	V CAP TEMP Hz	,
12		/

DT-3366 /68

5.2.3  
5.2.3

1		
2		/
3	:	
A	/	/
B	/	• : • ( ) AC A «Inpush» INRUSH, «INRUSH»
C	/	• MAX • MIN 2 MAX/MIN
D		HOLD. HOLD. HOLD, HOLD.
E	,	• : •
4		:



• ( 6 .5.2.3) Vdc.


• 3361  
COM ( 5 .5.2.3),  
V ( 7 .5.2.3) ( 6 .5.2.3) Vac/dc.  
• MODE ( 4 .5.2.2) DC.  
• /

6.3

• 3360/61/63/66/67/68 .6.3.1  
COM ( 5 .5.2.3),  
V ( 7 .5.2.3) ( 6 .5.2.3) •))) □,  
• MODE →|• •)))  
• < 100 □

6.4

p-n  
p-n 3360/61/63/66/67/68  
COM ( 5 .5.2.3),  
V ( 7 .5.2.3) ( 6 .5.2.3) •))) □,  
• MODE →|• 0.4 0.7  
• - «OL».  
• «OL» 0



.6.3.1

6.5

• 3360/61/63/66/67/68  
COM ( 5 .5.2.3),  
V ( 7 .5.2.3) ( 6 .5.2.3) •))) □,  
• MODE →|• □.

6.6

• 3360  
( 6 .5.2.3) •))) □.  
• →|•  
• 3361/63/67/60 ( 6 .5.2.3) •))) CAP  
• MODE ( 4 .5.2.2) nF.

• V ( 7 .5.2.3). COM ( 5 .5.2.3),  
•  
•

• 3366 ( 6 .5.2.3) CAP.  
• V ( 7 .5.2.3). COM ( 5 .5.2.3),  
•  
•

6.7

:  
:

• 3366/61/63/67/68 TEMP  
• ( 6 5 .5.2.3), °F.  
• MODE  
•  
• ( 30 ).  
•

6.8

• 3360/3361/3368/66 ( 6 .5.2.3) "Hz %".  
• Hz/%, "Hz".  
• Hz ( 7 .5.2.3). COM ( 5 .5.2.3),,  
•

• 3363/67 ( 6 .5.2.3) "Hz %".  
• MODE, "Hz".  
• Hz ( 7 .5.2.3). COM ( 5 .5.2.3),,  
•

6.9

• 3360/3361/3368/66 ( 6 .5.2.3) "Hz %".  
• Hz/%, "%".  
• Hz ( 7 .5.2.3). COM ( 5 .5.2.3),,  
•

• 3363/67 ( 6 .5.2.3) "Hz %".  
• MODE, "%".  
• Hz ( 7 .5.2.3). COM ( 5 .5.2.3),,  
•

6.10

:  
:

• 3361/3360), 660 1000 ( 3366). ( 6 .5.2.3) 1000 , 600 60 ( )  
• ( 2 .5.2.1), ( 1  
• .5.2.1). ( 1 .5.2.1)  
•

• 3363/3367 ( 6 .5.2.3) 1000 , 600 60 .  
 •  
 • MODE  
 • ( 2 AC.  
 • .5.2.1). ( 1 .5.2.1), ( 1  
 • ( 1 .5.2.1) ,

• 3368 ( 6 .5.2.3) 660 1000 AC.  
 •  
 • ( 2 .5.2.1), ( 1  
 • .5.2.1). ( 1 .5.2.1) ,

6.11

:  
 :

• 3367/3363 ( 6 .5.2.3) 1000 , 600 60 .  
 •  
 • MODE, DC.  
 • ( 2 .5.2.1), ( 1  
 • .5.2.1). ( 1 .5.2.1) ,

• 3368 ( 6 .5.2.3) 660 1000  
 •  
 • ( 2 .5.2.1), ( 1  
 • .5.2.1). ( 1 .5.2.1) ,

7  
7.1

:  
 :  
 :

•  
 •  
 • 9  
 •  
 •

7.2

8  
8.1

« ( ) » , ( ,  
 , ) .

8.2

