

## Micro calibration bath Models CTB9100-165, CTB9100-225

WIKA data sheet CT 46.30



for further approvals see  
page 3

### Applications

- Calibration in the pharmaceutical industry and in the food industry
- On-site calibration of short temperature probes
- Simultaneous calibration of several probes

### Special features

- Two ranges: -35 ... +165 °C [-31 ... +329 °F] and 40 ... 225 °C [104 ... 437 °F]; optionally 255 °C [491 °F]
- Large tank of Ø 60 x 150 mm [2.36 x 5.91 in]
- Short response time of the bath temperature
- Continuously adjustable stirrer



### Temperature micro calibration baths

Fig. left: Model CTB9100-165

Fig. right: Model CTB9100-225

## Description

### Range of applications

The new WIKA micro calibration baths are the perfect complement to the series CTD9100 and CTD9300 temperature dry-well calibrators.

In dry-well temperature calibrators, as a result of their low insertion depth and the resulting heat conduction errors, short probes lead to a significant increase in measurement uncertainty. Even when comparing the test items with an external reference thermometer, they can not be too short. Once the stem length drops below 70 mm [2.76 in], a micro bath is definitely preferable to a temperature dry-well calibrator.

If several probes are to be calibrated at the same time, the micro bath has additional advantages: Thermometers with differing stem diameters can be calibrated together, without the need to provide exactly the correct inserts. This approach is particularly useful for on-site calibration, when there is a wide variety of test items and their stem diameters are either varied or unknown.

### For temperature ranges from -35 ... +255 °C [-31 ... +491 °F]

The CTB9100 micro calibration baths are available in two versions:

- CTB9100-165 for -35 ... +165 °C [-31 ... +329 °F]
- CTB9100-225 for 40 ... 225 °C [104 ... 437 °F]; optionally 255 °C [491 °F]

The instruments are typically used in the pharmaceutical industry and in the food industry, particularly for on-site calibration.

### Easy to use

The series CTB9100 micro calibration baths operate with temperature-controlled liquid tanks with a useable working range of Ø 60 x 150 mm [2.36 x 5.91 in] depth. The maximum insertion depth of the test items reduces the heat conduction errors and thus leads to smaller measurement uncertainties. The calibration temperature, adjusted simply using two buttons on the controller, can be very quickly controlled. The actual and set temperature can be displayed simultaneously on a large 4-digit, high-contrast LC display. Thus reading errors are virtually eliminated.

# Specifications

## CTB9100 series

	Model CTB9100-165	Model CTB9100-225
<b>Indication</b>		
Temperature range	-35 ... +165 °C [-31 ... +329 °F]	40 ... 225 °C [104 ... 437 °F] optionally 40 ... 255 °C [104 ... 491 °F]
Accuracy <sup>1)</sup>	±0.2 K	±0.3 K
Stability <sup>2)</sup>	±0.05 K	
Resolution	0.01 to 100 °C, then 0.1 [0.01 to 100 °F, then 0.1]	
<b>Temperature distribution</b>		
Axial homogeneity <sup>3)</sup>	dependent on temperature, temperature probes and their quantity	
Radial homogeneity <sup>4)</sup>	dependent on temperature, temperature probes and their quantity	
<b>Temperature control</b>		
Heating time	approx. 45 min from 20 °C to 160 °C [from 68 °F to 320 °F]	approx. 10 min from 20 °C to 225 °C [from 68 °F to 437 °F]
Cooling time	approx. 30 min from +20 °C to -20 °C [from +68 °F to -4 °F]	approx. 30 min from 225 °C to 50 °C [from 437 °F to 122 °F]
Stabilisation time <sup>5)</sup>	dependent on temperature and temperature probe	
<b>Tank</b>		
Insertion depth	150 mm [5.91 in]	
Volume	approx. 0.6 litres	
Tank dimensions	Ø 60 x 165 mm [2.36 x 5.91 in]	
<b>Voltage supply</b>		
Operating voltage	AC 100 ... 240 V, 50/60 Hz	AC 230 V, 50/60 Hz AC 100 ... 240 V, 50/60 Hz <sup>6)</sup>
Power consumption	375 VA	1,000 VA
Fuse	6.3 A slow blow fuse	10 A slow blow fuse (at AC 100 ... 240 V) 6.3 A slow blow fuse (at AC 230 V)
Power cord	AC 230 V; for Europe	
<b>Communication</b>		
Interface	RS-485	
<b>Case</b>		
Dimensions (W x D x H)	215 x 305 x 425 mm [8.46 x 12.00 x 16.73 in]	150 x 270 x 400 mm [5.91 x 10.63 x 15.75 in]
Weight	approx. 12.5 kg [27.6 lbs]	approx. 7.5 kg [16.5 lbs]

1) Is defined as the measuring deviation between the measured value and the reference value.

2) Maximum temperature difference at a stable temperature over 30 minutes.

3) Maximum temperature difference at 40 mm [1.57 in] above the bottom.





4) Maximum temperature difference between the bores (all thermometers inserted to the same depth).

5) Time before reaching a stable value.

6) AC 100 ... 240 V, 50/60 Hz supply voltage must be specified on the order, otherwise an AC 230 V one will be delivered.  
This version is only available for the temperature range up to 255 °C [491 °F].

The measurement uncertainty is defined as the total measurement uncertainty ( $k = 2$ ), which contains the following shares: Accuracy, measurement uncertainty of reference, stability and homogeneity.

## Approvals

Logo	Description	Country
	<b>EU declaration of conformity</b> <ul style="list-style-type: none"> <li>■ EMC directive EN 61326 emission (group 1, class B) and immunity (industrial application)</li> <li>■ Low voltage directive EN 61010, safety requirements for electrical equipment for measurement, control and laboratory use</li> <li>■ RoHS directive</li> </ul>	European Union
	<b>EAC (option)</b> <ul style="list-style-type: none"> <li>■ EMC directive</li> <li>■ Low voltage directive</li> </ul>	Eurasian Economic Community
	<b>KazInMetr (option)</b> Metrology, measurement technology	Kazakhstan
-	<b>MTSCHS (option)</b> Permission for commissioning	Kazakhstan
	<b>BelGIM (option)</b> Metrology, measurement technology	Belarus

## Certificates

Certificate	
<b>Calibration</b>	Standard: 3.1 calibration certificate per DIN EN 10204 Option: DKD/DAkkS calibration certificate
<b>Recommended recalibration interval</b>	1 year (dependent on conditions of use)

Approvals and certificates, see website

## Bath liquids <sup>7)</sup>

Accessories	Model CTB9100-165	Model CTB9100-225
<b>Silicone oil DC 200.05:</b> -40 ... +130 °C [-40 ... +266 °F] FP <sup>8)</sup> = 133 °C [271.4 °F]	from -35 ... +130 °C [-31 ... +266 °F] very well usable	not recommended
<b>Silicone oil DC 200.10:</b> -35 ... +160 °C [-31 ... +320 °F] FP <sup>8)</sup> = 163 °C [325.4 °F]	from -35 ... +160 °C [-31 ... +320 °F] well usable	not recommended
<b>Silicone oil DC 200.20:</b> 10 ... 220 °C [50 ... 428 °F] FP <sup>8)</sup> = 230 °C [446 °F]	not recommended	from 40 ... 225 °C [104 ... 437 °F] well usable
<b>Silicone oil DC 200.50:</b> 25 ... 250 °C [77 ... 482 °F] FP <sup>8)</sup> = 280 °C [536 °F]	not recommended	from 80 ... 255 °C [176 ... 491 °F] well usable

<sup>7)</sup> Other liquids could be used as agreed, provided that the temperature range and viscosity are suitable for the application.

<sup>8)</sup> FP = flash point open cup

## Micro calibration baths, CTB9100 series

Two instruments for the temperature range from -35 ... +255 °C [-31 ... +491 °F]



Micro calibration bath model CTB9100-165 with screw-on lid

### Model CTB9100-165

Temperature range from -35 ... +165 °C [-31 ... +329 °F]

This micro calibration bath is an efficient tool for the calibration of thermometers. It works with Peltier elements and can thus reach test temperatures below ambient temperature.

New multistage Peltier elements ensure a good long-term stability and high reliability within the entire working range. Due to its capacity for active cooling, it is often used in biotechnology, pharmaceutical and food industries.



Micro calibration bath model CTB9100-225

### Model CTB9100-225

Temperature range from 40 ... 255 °C [104 ... 491 °F]

The CTB9100-225 is used in the medium temperature range up to 255 °C [491 °F]. It generates its temperature with electrical resistance heating. For cooling down, the fan is run at its highest setting. Thus it is possible to achieve cooling from 255 °C to 50 °C [491 °F to 122 °F] within just 30 minutes.

In addition to short heating and cooling times, this bath is set apart by its light weight and compact design. It can be used in a wide range of industries.

## Controls

The temperature controller of the micro calibration bath is located on the front panel:


- The actual and set points can be read from the display simultaneously with a resolution of 0.01 or 0.1 K.
- Frequently used set points can be entered independently into four memory locations and quickly recalled.
- Individual temperatures can be easily entered via the two arrow buttons.
- Potentiometer for a continuous stirrer setting

In the tank there is a removable wire basket, which protects the magnetic stirrer against contact with the test items. Mains connector socket, power switch and fuse holder are located centrally at the front of the underside of the instrument.

## Display and control panel



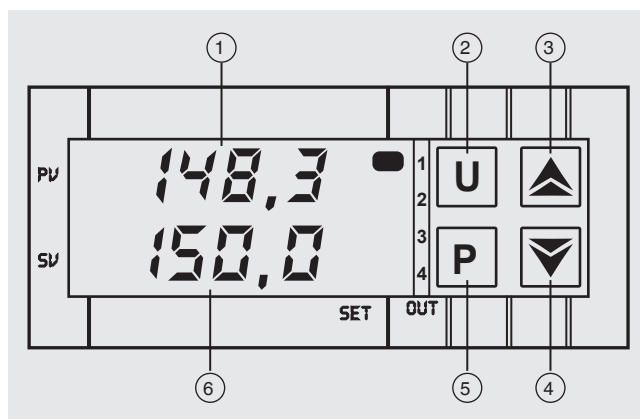

- Set and actual temperature are displayed simultaneously on a 2-line LC display.
- Frequently used set points can be stored in four memory locations.
- The U button is used to recall stored set temperatures.
- The arrow buttons are used to change the set temperatures.
- The P button is used to confirm the changes.





- ① Temperature display
- ② Recall button
- ③ Increase button
- ④ Decrease button
- ⑤ Programming button
- ⑥ Set temperature






## Accessories

Accessories for model CTB9100-125		Order code
Description		CTX-A-B1
	<b>Silicone oil DC 200.05</b> In 1 litre plastic bottle For temperature range -40 ... +130 °C [-40 ... +266 °F]; FP = 133 °C [271.4 °F]	-05-
	<b>Silicone oil DC 200.10</b> In 1 litre plastic bottle For temperature range -35 ... +160 °C [-31 ... +320 °F]; FP = 163 °C [325.4 °F]	-10-
	<b>Silicone oil DC 200.20</b> In 1 litre plastic bottle For temperature range 10 ... 220 °C [50 ... 428 °F]; FP = 230 °C [446 °F]	-20-
	<b>Silicone oil DC 200.50</b> In 1 litre plastic bottle For temperature range 25 ... 250 °C [77 ... 482 °F]; FP = 280 °C [536 °F]	-50-
	<b>Transport case</b>	-TB-
	<b>Castors for transport case</b>	-CC-
	<b>Calibration software</b> Software package to operate the calibrator	-CS-
	<b>Operating instructions English-German</b>	ML
	<b>Insert for liquids without filling</b> Consisting of: Insert with leak-proof cover, probe basket, magnetic stirrer and lifter, replacement tool   <b>New adjustment required!</b>	-BE-
	<b>Probe basket</b> Height-adjustable	-SK-
	<b>Probe holder</b> for cooling instruments of the CTD91xx series	-FL-
	<b>Screw-on lid</b> Material: Stainless steel	-LM-
	<b>Screw-on lid</b> Material: Plastic	-LP-

Accessories for model CTB9100-125		Order code
Description		CTX-A-B1
	<b>Screw-on lid</b> Material: Plastic With bore 1x G ½	-L1-
	<b>Screw-on lid</b> Material: Plastic With bores 6x G ¼	-L6-
	<b>Magnetic stirrer</b>  <b>Not suitable for insert for liquids!</b>	-MS-
	<b>Interface cable</b> with integrated RS-485 to USB 2.0 converter	-RC-
	<b>Power cord</b> for the EU	-EU-
	for Switzerland	-CH-
	for UK	-UK-
	for USA/Canada	-US-
<b>Ordering information for your enquiry:</b>		
1. Order code: CTX-A-B1 2. Option:		↓ [ ]

Accessories for model CTB9100-225		Order code
Description		CTX-A-B2
	<b>Silicone oil DC 200.05</b> In 1 litre plastic bottle For temperature range -40 ... +130 °C [-40 ... +266 °F]; FP = 133 °C [271.4 °F]	-05-
	<b>Silicone oil DC 200.10</b> In 1 litre plastic bottle For temperature range -35 ... +160 °C [-31 ... +320 °F]; FP = 163 °C [325.4 °F]	-10-
	<b>Silicone oil DC 200.20</b> In 1 litre plastic bottle For temperature range 10 ... 220 °C [50 ... 428 °F]; FP = 230 °C [446 °F]	-20-
	<b>Silicone oil DC 200.50</b> In 1 litre plastic bottle For temperature range 25 ... 250 °C [77 ... 482 °F]; FP = 280 °C [536 °F]	-50-
	<b>Transport case</b>	-TB-
	<b>Castors for transport case</b>	-CC-
	<b>Calibration software</b> Software package to operate the calibrator	-CS-
<b>Operating instructions English-German</b>		ML

Accessories for model CTB9100-225		Order code
Description		CTX-A-B2
	<p><b>Insert for liquids without filling</b> Consisting of: Insert with leak-proof cover, probe basket, magnetic stirrer and lifter, replacement tool</p> <p> <b>New adjustment required!</b></p>	-BE-
	<p><b>Probe basket</b> Height-adjustable</p>	-SK-
	<p><b>Probe holder</b> for heating instruments of the CTD91xx series</p>	-FH-
	<p><b>Screw-on lid</b> Material: Stainless steel</p>	-LM-
	<p><b>Screw-on lid</b> Material: Plastic</p>	-LP-
	<p><b>Screw-on lid</b> Material: Plastic With bore 1x G 1/2</p>	-L1-
	<p><b>Screw-on lid</b> Material: Plastic With bores 6x G 1/4</p>	-L6-
	<p><b>Magnetic stirrer</b></p> <p> <b>Not suitable for insert for liquids!</b></p>	-MS-
	<p><b>Interface cable</b> with integrated RS-485 to USB 2.0 converter</p>	-RC-
	<p><b>Power cord</b> for the EU</p>	-EU-
	for Switzerland	-CH-
	for UK	-UK-
	for USA/Canada	-US-
<b>Ordering information for your enquiry:</b>		
<p>1. Order code: CTX-A-B2 2. Option:</p>		<p>↓ [ ]</p>



## Scope of delivery

- Micro calibration bath model CTB9100-165 or CTB9100-225
- Power cord 1.5 m [5 ft] with safety plug
- Screw-on lid, stainless steel
- Operating instructions
- 3.1 calibration certificate per DIN EN 10204

## Options

- Instruments variants for AC 100 ... 240 V, 50/60 Hz for model CTB9100-225
- Display in Fahrenheit °F
- DKD/DAkkS calibration certificate

## Ordering information

### Calibrator CTB9100-165

CTB9100-165 / Unit / Software / Insert for liquids / Calibration / Transport case / Interface converter / Power cord / Further approvals / Additional ordering information

### Calibrator CTB9100-225

CTB9100-225 / Temperature range / Supply voltage / Unit / Software / Insert for liquids / Calibration / Transport case / Interface converter / Power cord / Further approvals / Additional ordering information

© 03/2006 WIKA Alexander Wiegand SE & Co. KG, all rights reserved.  
The specifications given in this document represent the state of engineering at the time of publishing.  
We reserve the right to make modifications to the specifications and materials.